



1. Turn off corp stop.
2. Cut existing copper pipe 12" from corp stop, loosen and remove flare nut, remove and discard copper pipe.
3. Insert a copper disc #6125 into flare nut, reconnect and tighten as necessary to seal.
4. If corp leaks slightly, gently tighten bottom nut to seal.



CITY OF COEUR D'ALENE STANDARD DRAWING

**SERVICE ABANDONED AT
CORP STOP – COPPER**

APPROVED BY:

Chris Bosley
CITY ENGINEER, PE 10604

10/1/24
DATE:

DWG NO.

W-40